



AccuClean[®] Advanced Rapid Protein Residue Test

AccuClean[®] Advanced Rapid Protein Residue Test

AccuClean Advanced delivers industry-leading speed and sensitivity for determining the cleanliness of food contact surfaces and equipment. AccuClean Advanced is a simple, 10-second visual test that reveals detected protein residue through an easy-to-interpret colour change. With a protein detection limit of 10 µg, the test provides fast, sensitive and reliable results.

Features

- ✓ **Fast:** 10 seconds to result
- ✓ **Sensitive:** As low as 10 µg protein per sample
- ✓ **Simple:** No equipment required



The Dairy School Auchincruive, Ayr, Scotland KA6 5HU
Tel: +44 (0)1292 525 627 • Fax: +44 (0)1292 525 602
Web: www.neogeneurope.com • Email: hygiene_uk@neogeneurope.com

AccuClean Advanced

Note: Please read kit instructions completely before performing test.


How it works

AccuClean Advanced determines cleanliness by detecting any protein residues left behind from previously processed food and liquids. If no protein is detected, the solution in the bottom of the cup will remain copper-coloured to indicate the surface is clean. A colour change to grey/green or blue indicates protein has been detected from the surface sample



Sample

Remove the plunger portion of the device and place the end with the pad on the surface to be tested. To sample, crisscross a 4 x 4 inch (10 x 10 cm) portion of the surface. For best results, sample in a back-and-forth motion within the sampling area as shown.

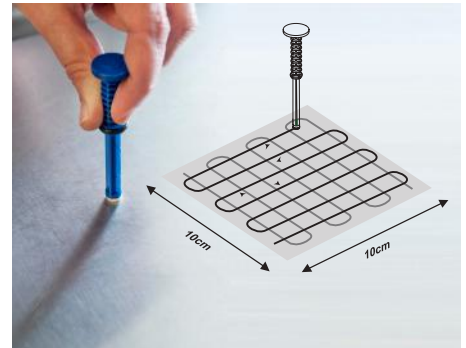


Activate

Return the plunger to the cartridge and activate by pressing it fully into the cartridge. Gently shake the cartridge from side to side for ten seconds.



Interpret

Read by examining the colour of the remaining solution using the provided colour comparator.

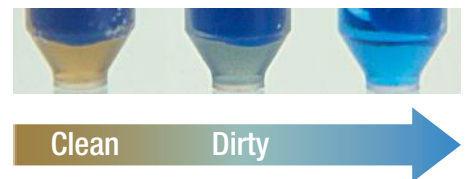

#9960 AccuClean Advanced Rapid Protein Residue Test

Materials Provided:

- 100 AccuClean Advanced samplers
- 1 Kit insert
- 1 Colour comparator



The Dairy School Auchincruive, Ayr, Scotland KA6 5HU
Tel: +44 (0)1292 525 627 • Fax: +44 (0)1292 525 602
Web: www.neogeneurope.com • Email: hygiene_uk@neogeneurope.com

NE9193_0917